

Guarantee:

UZIN and nora systems give a guarantee of 5 years on all the characteristics guaranteed in the installation instructions.

- When laying the floor covering, take the generally accepted rules of the trade and technology and the applicable and the respective, valid national standard EN into account.

Claims under the guarantee will be excluded if:

- Skirting boards or hollow mouldings from other manufacturers or from materials other than nora systems rubber are fitted
- The rear and front side of the rubber profiles are not wet-cleaned before application
- Unusual influences affect the product, in particular of a chemical or mechanical nature
- A utilisation or application has taken place that deviates from the installation instructions.

In all cases, some adhesion tests must be carried out on-site before carrying out the application.

PRODUCT DATA SHEET & APPLICATION INSTRUCTIONS

Special tape for nora® rubber skirting

Goman 50

Secure gluing of nora® rubber skirting

Product Properties / Benefits:

- ▶ nora systems – UZIN system guarantee
- ▶ No need for contact adhesive
- ▶ Clean indoor air
- ▶ No pre-fitting and priming
- ▶ 3 – 5 times faster

Applications:

▶ Suitable nora® rubber skirting boards:

- S 1023 U
- S 1008 U
- S 3003 U (for floor part)
- SI 7001 (for floor part)
- SA 7002 (for floor part)

▶ Suitable walls:

- Breeze / plaster
- Brickwork
- Metal (untreated)
- Coats of paint
- Plastic
- Wood
- Concrete
- Ceramic
- Plasterwork (primed)
- Wallpaper*
- Filled (primed)

* see „Preparation“



for nora® rubber skirting boards
ON surfaces with up to 3 mm deep texture

Technical Data:

Special acrylic adhesive

Will not dry out or become brittle

Application temperature from + 15 °C

Temperature resistant from – 40 °C to + 140 °C (when installed)

Shelf-life min. 2 years in original packaging; store protected from direct sunlight

Do not place rolls on to the cut surfaces without adhesive-resistant paper washers inbetween


APPLICATION INSTRUCTIONS

Preparation:

- ▶ Preparation of the subsurface: The subsurface must be dry, hard, flat, able to be walked on and free of grease, dust and silicone, in accordance with the applicable, the respective valid national standard EN.
- ▶ Wallpaper: must be firmly glued into place.
- ▶ Binding the dust: any dust must be consolidated with a solvent-free primer.

What you need:

- ▶ Goman 50, carpet knife, rubber hammer, instant glue, hair dryer, cloths

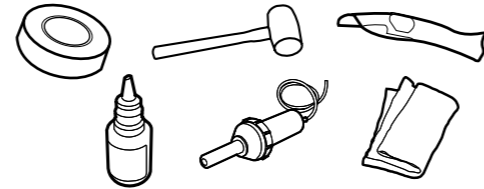

1

- ▶ Wet clean both sides of the rubber skirting board → optimal adhesion
- ▶ Allow the rubber skirting board to dry



2

- ▶ Lay the adhesive-repellent paper washer on the dispensing plate
- ▶ Lay the Goman 50 on the paper washer




3

- ▶ With the help of the applicator, apply the Goman 50 to the wall, 4 mm from the floor covering
- ▶ Rub in well



4

- ▶ Pull off the protective paper in stages up to approx. 20 cm before the corner
- ▶ Fit the rubber skirting board up to approx. 20 cm before the corner free of tension and strain

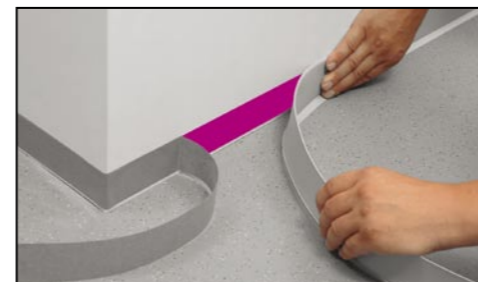

5

- ▶ Hammer in the rubber skirting board with the rubber hammer immediately in stages without leaving a gap → doubles the adhesive force



6

- ▶ Heat the rear sides of the inner/outer corners of the rubber skirting board with the hair dryer, and pre-shape them
- ▶ Remove the protective paper, fit the rubber skirting board free of tension and strain and hammer in



7

- ▶ Bind joints together using instant glue, avoiding any open joints.

