

Special tape for rubber skirting boards

Goman 50



Bonding rubber skirting boards securely

Applications:

Special acrylic adhesive system for the fast and secure installation of rubber skirting board. Goman 50 allows quick and clean working without solvents. For interior applications.

► Suitable for:

- Rubber skirting boards
- Rubber stair corners
- Rubber shaped skirting (for floor section)
- Shaped skirting corner pieces

► Suitable on:

- Plaster
- Brickwork
- Metal (untreated)
- Painted surfaces
- Plastics
- Wood
- Concrete
- Ceramics
- Gypsum (primed)
- Wallpaper
- Levelling compound (primed)



www.bauer-engel.de/uz113

ÖKOLINE

for rubber skirting board
ON substrates up to 1 mm structure

Ingredients: Acrylic copolymers, wetting and defoaming agents, laid scrims, paper.

Product benefits / Features:

- Avoids use of solvent based contact adhesives
- Clean indoor air
- Solvent-free
- No prior fitting and priming
- 3 – 5 times faster
- “Blue Angel” as per RAL-UZ 113
- EMICODE EC1 PLUS / very low-emission

Technical specifications:

Packaging:	carton
Width of rolls:	50 mm
Length of rolls:	50 m
Shelf life:	min. 2 years
Colour:	transparent with green scrims
Substrate temperature:	min. 15°C
Open time:	none
Working time:	none
Set to traffic:	immediately after bonding
Sealing / joining seams:	immediately after bonding


Provides the highest possible level of emission safety and contributes towards creating a healthy room climate. Marked with the “Blue Angel” for low-emission floor covering adhesives and other installation materials according to RAL-UZ 113.

Note for preparation:

- ▶ The substrate must be permanently dry, hard, load-bearing, flat, free from grease, dust and silicon, in accordance with the respective national standards (EN, DIN, VOB, OE, SIA).
- ▶ Wallpaper must be cut/removed for the height covered by the skirting.
- ▶ Bind dust with a solvent-free primer (e.g. UZIN PE 260).
- ▶ For the best adhesion clean the rubber skirting board with water and allow to dry.
- ▶ Ensure the floor covering and Goman 50 are free from contortions before installing. Allow the floor covering (and Goman 50) to acclimatise sufficiently according to the manufacturers recommendations.

The following is needed:

Goman 50, rubber mallet, carpet knife, instant glue, welding rod, rag

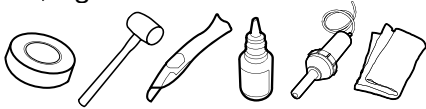

Tips for processing:


- ▶ Moisten knife with water to facilitate cutting.

Application:

- 1 ▶ Put the adhesive-repellent paper washer on the dispensing plate
- ▶ Place Goman 50 on the paper washer
- ▶ With the help of the dispensing plater, apply Goman 50 to the wall, 4 mm from the floor covering
- ▶ Rub down well




- 2 ▶ Pull off the protective paper in stages up to approx. 20 cm before the corner
- ▶ Fit the rubber skirting up to approx. 20 cm before the corner without stressing and twisting

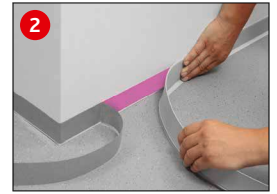


- 3 ▶ Immediately after installing, tap along the rubber skirting board with a rubber hammer → doubles the adhesive strength



- 4 ▶ Heat the rear sides of the inner / outer corners of the rubber skirting board and pre-shape them
- ▶ Remove the protective paper, fit the rubber skirting board without twisting and tap along with the rubber hammer

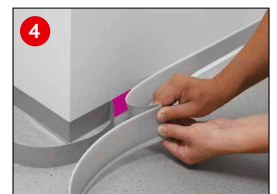

- 5 ▶ Bind joints together using instant glue, avoiding any open joints

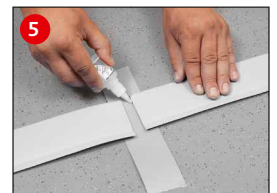

Important notes:

Store in a dry, cool area without exposure to direct sunlight.

Protection of the workplace and the environment:

The product does not require any special labour protection measures. For reasons of working hygiene, we recommend avoiding eating, drinking and smoking during processing of this product. Store out of the reach of children.

For more information refer to www.uzin.com or +49 (0)731 4097-0

Disposal:

Empty shells and the cardboard packaging can be recycled. Material remnants can be disposed of as household waste.

Warranty:

UZIN grants a 5-year warranty for all properties claimed in the installation instructions.

- Follow the generally acknowledged rules of the trade and of technology for the installation of floor covering of the respective applicable standards (EN, DIN, VOB, OE, SIA).
- In all cases, some adhesion tests must be carried out on-site before carrying out the installation.

The warranty becomes void if:

- the front and back of rubber profiles were not cleaned with water before installing.
- unusual influences, and in particular those of a chemical or mechanical nature, affect the product.
- used or processed differently than stated in the installation instructions.
- dampness affects Goman 50.
- installation was performed below 15°C (on the wall).
- Goman 50 is used in areas with increased humidity or thermal exposures (e.g. conservatories).